

AGBAY Cake Leveler Blade Replacement Instructions

This blade is intended for use on **AGBAY** Levelers only.

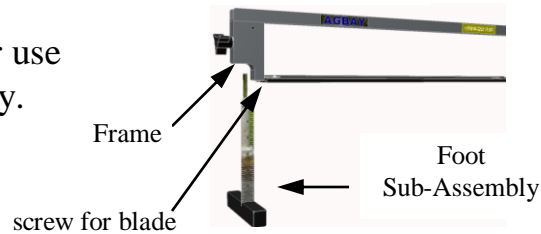


Fig. # 1

- Removing Blade -

1. Cover blade with blade guard.
2. Remove both foot sub-assemblies from frame. (see fig.#1)

* **Double Blade Levelers:** Disassemble Upper Blade Frame from Lower Blade Frame by removing both back knobs before changing blades.

3. Remove tension from blade by loosening four socket head screws on both sides of tool. Loosen each screw with a 3/16 allen wrench (5/32 Allen wrench for Jrs.) four complete turns. (see fig.#2) It is now safe to remove the blade.
4. Using a screw driver, remove the two screws that secure the blade to the frame.

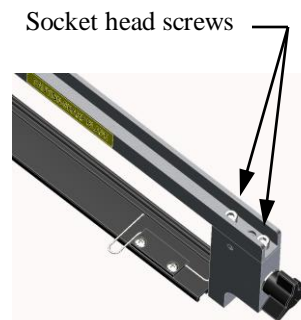


Fig. # 2

• Installing Blade -

1. Make sure the four socket head cap screws on frame are loose (two screws on each side).
2. Place blade into blade guard, then using a screw driver, install the two screws through holes in blade and into threaded holes in bottom of frame.

Important: * **Single Blade Levelers:** Cutting edge of blade must be on the same side as the rounded filler screw for .

* **Double Blade Levelers:** Cutting edge of blade must be on the opposite side of caution label on the Lower Frame but on the same side on the Upper Frame.

3. Tighten the four socket head screws. This will put the blade in tension.
4. Reinstall foot sub-assemblies so that scales are on the same side as caution label.

* **Double Blade Levelers:** Re-assemble Upper Blade Frame to Lower Blade Frame with back knobs making sure that both blades face the same direction.